

INSTALLATION INSTRUCTION

Add A Fan

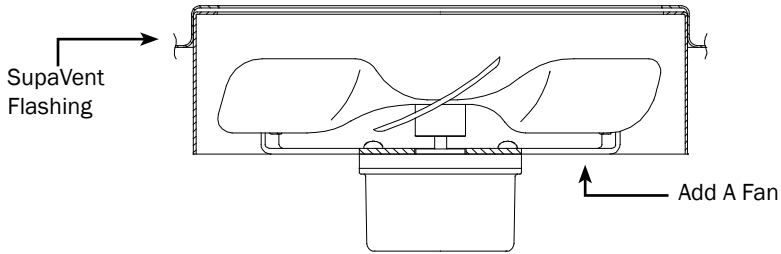


FIG 1

Step 1

Insert Add A Fan into the 250mm diameter flashing of the SupaVent with the fan facing upwards as shown in Fig 1.

Step 2

Use 4 rivets (4-2 are recommended) to secure the Add A Fan to the flashing.

Step 3

Install the SupaVent as per the instructions included in the SupaVent carton.

Step 4

Wire the Add A Fan to the 12V power pack using the terminal blocks provided. Ensure the polarity of the power pack and Add A Fan is correct. See Fig 2.

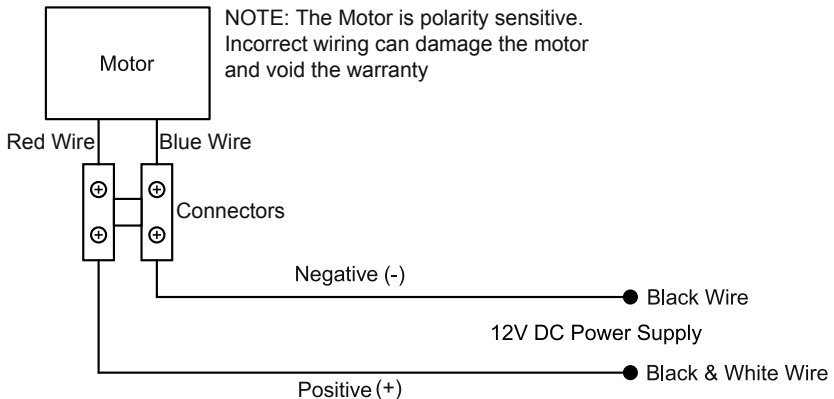


FIG 2